
CONTENTS SUPPLIED

- (a.) Frame
- (b.) Canopy Top
- (c.) Carry Bag

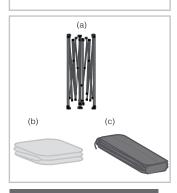

HARDWARE HIGHLIGHTS

 
- (a.) Peak Tensioning Device (DO NOT crank-up until fabric is stretched)
- (b.) Velcro Sewn Inside
- (c.) Easy Release Thumb Latch



*DO NOT crank up unless fabric is stretched.



*Used For Backwall



*Easy To Use Thumb Latch.





CANOPY

Assembly Instructions —

STEP 1


STEP 4

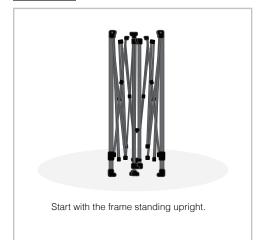

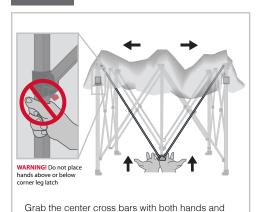


lift up until the frame is fully extended.

STEP 2

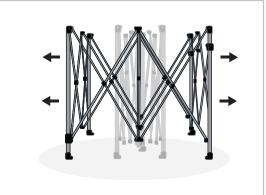


Grab one leg of the frame with each hand and lift up and out to extend the frame until it is near halfway open.

STEP 5

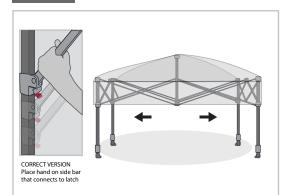


With one hand holding the frame leg, reach under the canopy top with the other hand, and push up until you feel it click into place. Do this on all four corners.

STEP 3

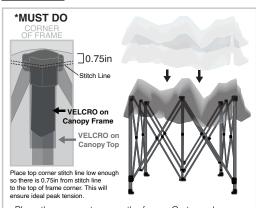

Place the canopy top over the frame. Go to each corner and attach the velcro inside the canopy top to the velcro on the top edge of the canopy frame.

STEP 6

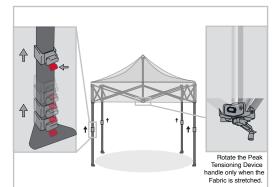

Go to each leg, place your foot on the canopy footpad, grab the leg and lift up to raise the canopy. Do this on all four corners until desired height is reached. Use the Peak Tensioning Device to raise canopy top.