
OUTDOOR RETRACTABLE


Assembly Instructions

STEP 1

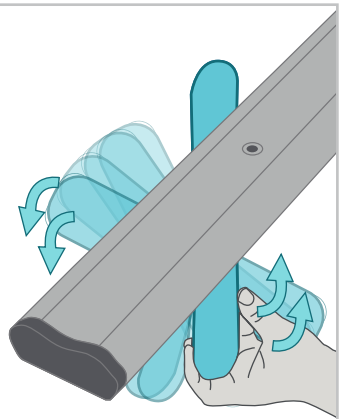


Attach feet to the bottom of the base and rotate 90°.

STEP 2

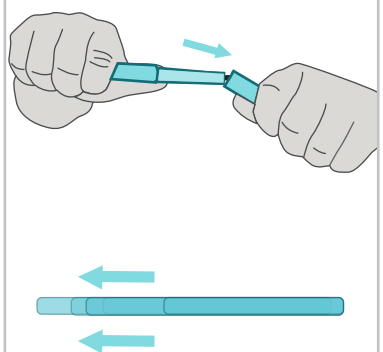


Connect the pole sections together. (The hooked end corresponds to the top and the round end corresponds to the bottom base.)

STEP 3

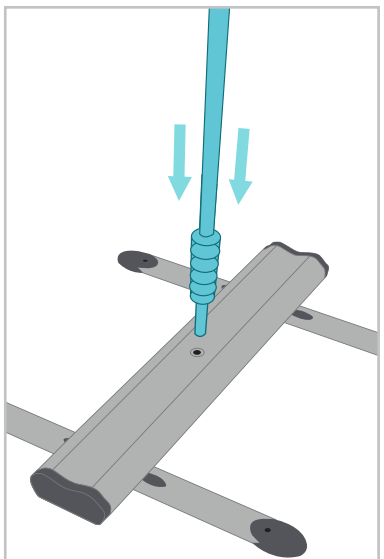


Insert pole into the hole on the base.

STEP 4

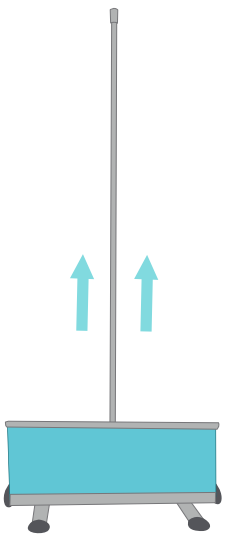

Unravel the banner out of the base by tilting the unit backwards

STEP5

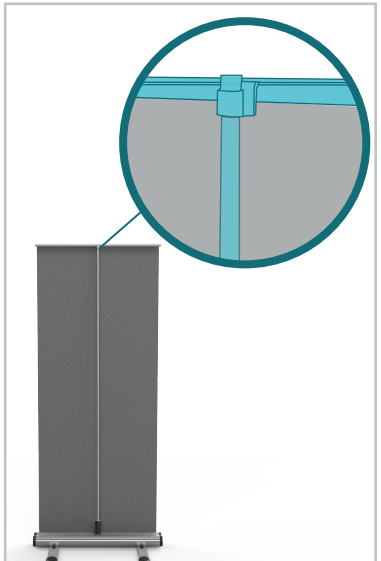

Attach telescopic pole to the clamp bar. Adjust pole to desired height.

CONTENTS SUPPLIED

(A) HARDWARE STAND
(B) TELESCOPIC SUPPORT POLE
(C) SILVER TRAVEL BAG

(A)



(B)



(C)

